


ENGINE HARNESS

M-12071-E302 and M-12071-H302

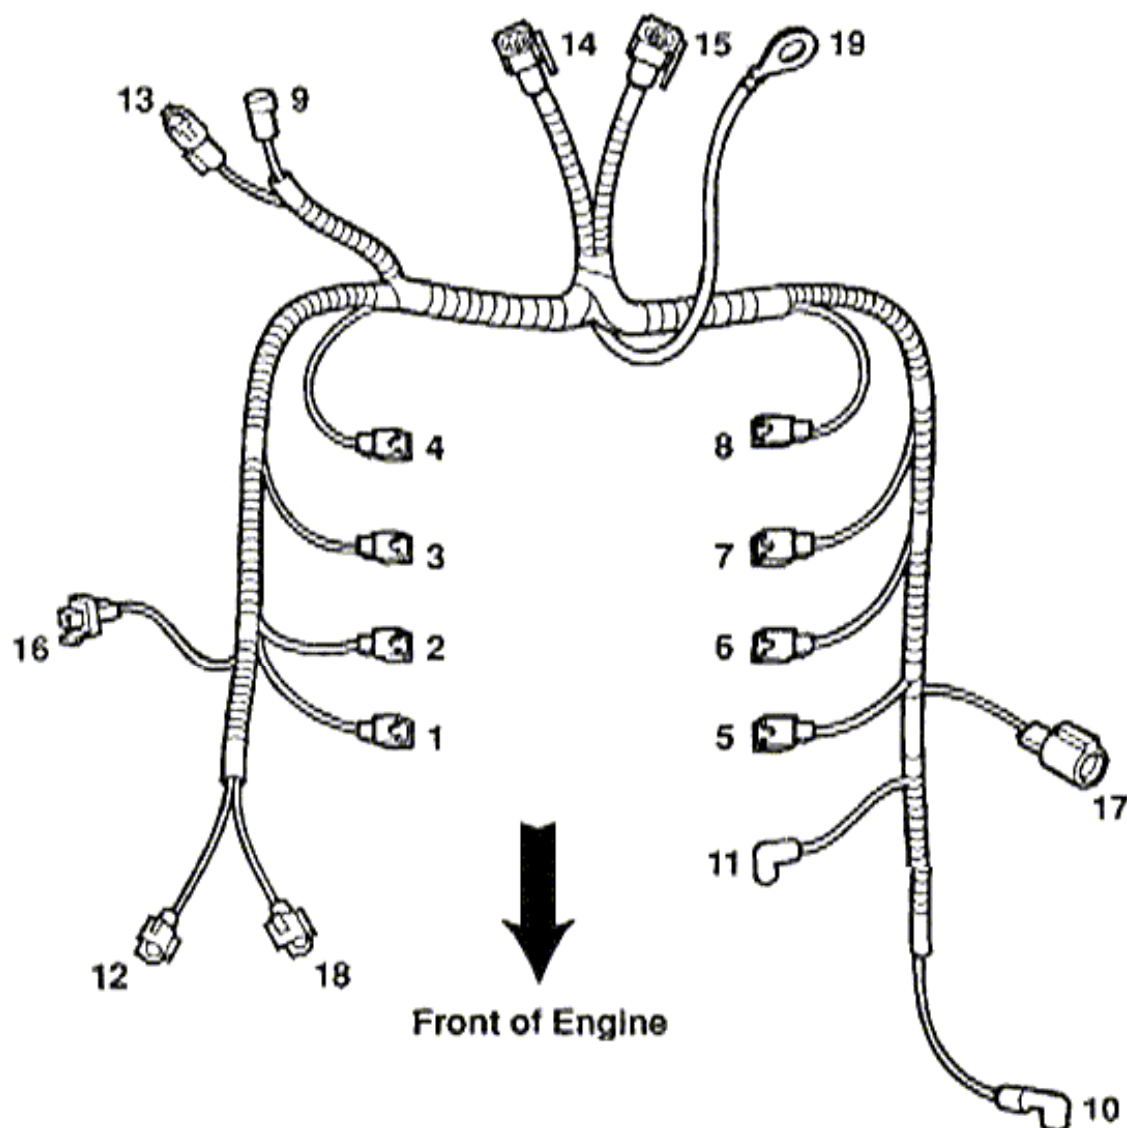

P = Purple
PK = Pink
LB = Light Blue
R = Red

W = White
GY = Gray
Y = Yellow
T = Tan

BR = Brown
BK = Black
LG = Light Green
O = Orange

GR = Green
BL = Blue
DB = Dark Blue
DG = Dark Green

Connector #	Connects to	Wire Colors
1	Fuel Injector #1	T, R
2	Fuel Injector #2	W, R
3	Fuel Injector #3	BR/Y, R
4	Fuel Injector #4	BR/LB, R
5	Fuel Injector #5	T/BK, R
6	Fuel Injector #6	LG/O, R
7	Fuel Injector #7	R, T/R
8	Fuel Injector #8	LB, R
9	Throttle Position	GY/R, GY/W, BR/W
10	Oil Pressure Sender	W/R
11	Coolant Temperature Sender	R/W
12	Canister Purge Solenoid	GY/Y, R
13	EGR Position Sensor	BR/W, GY/R, BR/GR
14	Ten-pin Connector (Black)	—
15	Ten-pin Connector (White)	—
16	Idle Speed Control	R, W/LB
17	Air Charge Temperature Sensor	GR/BK, GY/R
18	Engine Coolant Temperature Sensor	GR/R, GY/R
19	H.E.G.O. Sensor Ground	O